

WARRANTY

- The equipment warranty is valid for a period of 12 months from the date of purchase.
- The guarantee is valid against defects of origin, whether of material or of manufacture.
- Whenever there is an anomaly in the equipment, it must be returned as soon as possible, together with the purchase document
- When the warranty is triggered, damaged parts will be repaired or replaced, as the manufacturer understands. In the event of their replacement, the damaged parts become the supplier's property.
- Any defects resulting from improper installation or use / handling of the equipment are excluded from the warranty.
- The equipment will lose its warranty whenever any change or modification or even repair made by the user is identified.

DIRECTIVE 2002/96/EC



- This symbol means that, the product must be separately collected at the end of its life cycle. Do not deposit it in municipal containers as if it were ordinary municipal waste.



SYMBOL

- The product in question is manufactured in accordance with Directive 2006/95/EC for Low Voltage equipment

Use Instructions grill

PNH BY PINHA
RUA DO ALTO - VALE DO GROU – APARTADO 86
3750 - 064 AGUADA DE CIMA
TEL. +351 234 622 889 FAX. +351 234 624 044
comercial@pnh-bypinha.pt www.pnh-bypinha.pt

PARAMETERS

- General construction in stainless steel;
- 1 Chrome Nickel Resistance;
- 1 Timer;
- 1 intensity regulator;
- 1 230V red light, intensity indicator;
- 1 Cable with plug H05RR-F 3G1.5mm w/ 1.2mt;
- 1 Grid;
- 1 stainless steel tray;
- 4 support feet;

Model	Device Measurements AxWxD (mm)	Weight Gross (Kg)	Weight Liquid (Kg)	Power (W)	Voltage (V/Hz)	Packaging Measure AxWxD (mm)
600x300x280	280x600x300	10,6	10,1	2500	230~50	300x660x350
600x330x280	280x600x330	11,6	11,1	3000	230~50	300x660x350

OPERATING MODE

1 – Rotate the timer from left to right until the desired time;

2 - Turn the intensity regulator (1/2/3) to obtain more or less intensity;
When you turn the intensity regulator, the red indicator lights up indicating that the resistance is in operation;

The grill has a tray and a grid as accessories. Inside the oven, the position of the rack can be adjusted according to the size of the food.

INSTALLATION INSTRUCTIONS

- When choosing the place where you are going to place the equipment, you must make sure that it is level and that its surface is made of non-combustible material. Likewise, the equipment must be kept away from walls and other materials that could fall apart or catch fire under the heat.
- Before connecting the equipment to the mains, make sure that the supply voltage mentioned on the rating plate corresponds to that of the mains and check that the socket supports the equipment 's current.
- Remove the protection before using the device.

CLEANING INSTRUCTIONS

- Whenever cleaning the device, make sure that the power cord is unplugged and the equipment is completely cool.
- When cleaning the equipment, do not use water jets as there is a risk of hitting the electrical part. Use a dry cloth to clean the residue inside the equipment and complete the cleaning with a damp cloth.
- The tray and grid can be immersed in water for more effective cleaning. They must be placed in the equipment after they are completely dry
- Do not use abrasives or corrosive detergents to clean the equipment.

SECURITY INSTRUCTIONS

- Note that the power cord must not come into contact with resistors or other hot parts. If damaged, it must be replaced by the manufacturer or qualified personnel;
- When using the equipment, do not place cloths or other objects on it that could be damaged or cause any danger. If you need to move the device to another location, do so when it is completely cold.
- This equipment must be used by qualified personnel and is only used for browning food, any other use is inappropriate
- Do not let children near the equipment while it is hot.
- The user must read the instruction manual carefully before using the equipment and keep it in good condition for future reference.