



## Instruction Manual Hand Wash

## GENERAL FEATURES

### SIMPLE MODELS:

- Pedal lever with single-pedal mixer;
- Foot-operated pulsator with pre-setting temperature and non-return valve;
- Model prepared for hot and cold water ;
- With mixer tap;
- Accessory with paper and soap/gel dispenser available, for 400x400 model, on request;

### MODELS W/ FOOT PULSATION SYSTEM AND WASTE PAPER:

- Foot-operated pulsator with pre-setting temperature and non-return valve;
- Models prepared for hot and cold water;
- With mixer tap;
- Waste paper w/ oscillating door;
- Models available with tissue and soap/gel dispenser included.

## CHARACTERISTICS TABLE

Model	Product Dimensions LxPxA (mm)	Net Weight (Kg)	Gross weight (Kg)	Package dimensions LxPxA (mm)
Wash hands of floor square sink 385x385 with foot switch	385x385x850	7	9.3	390x390x910
Wash hands of floor 400x300 with foot button and basket with accessory dispenser	400x300x850	8	10.3	410x310x910
Wash hands of floor 400x300 with foot button and basket with accessory dispenser	400x300x1280	12	14.3	410x310x910
Only the Soap Dispenser and Towel Accessory *	398x120x424	4	4.2	403x125x429

\* Available separately, also adaptable to the 400x400 model

### Operation

The operation of the Hand Wash does not require energy consumption, based on washing hands with water mixing system (hot / cold).


## INSTRUCTIONS FOR USE

- Install the appliance at the desired location by connecting the water inlet and outlet.


**• WARNING: It is recommended that the connection to the sewer be made with rigid PVC pipe**

**WARNING If the water is of uncontrolled origin, it is advisable to fit a filter on the water inlet to avoid possible damage to the pulsator/pedal.**

## HYDRAULIC CONNECTION SCHEME

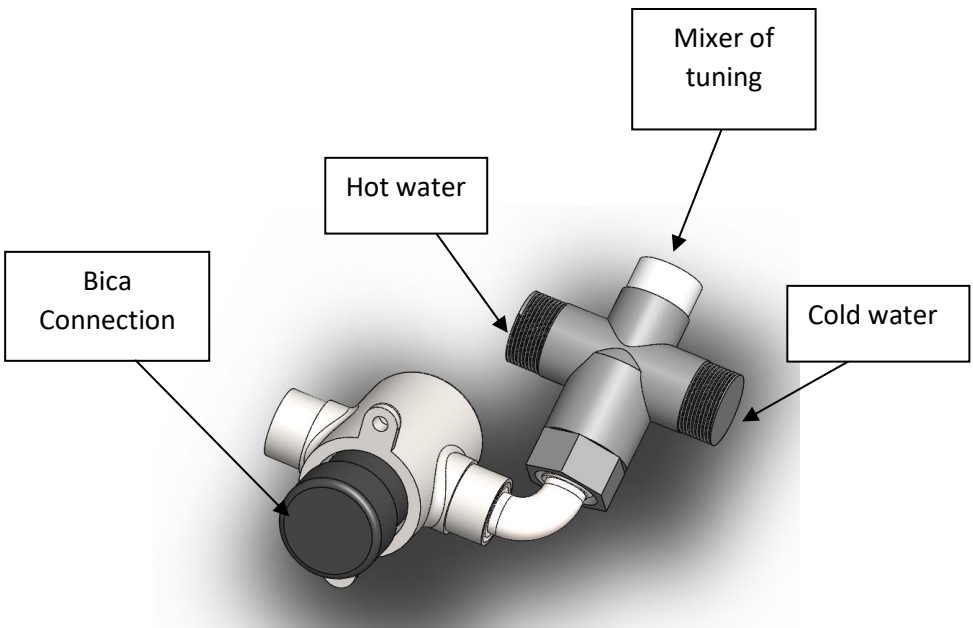

## ASSEMBLY SCHEME

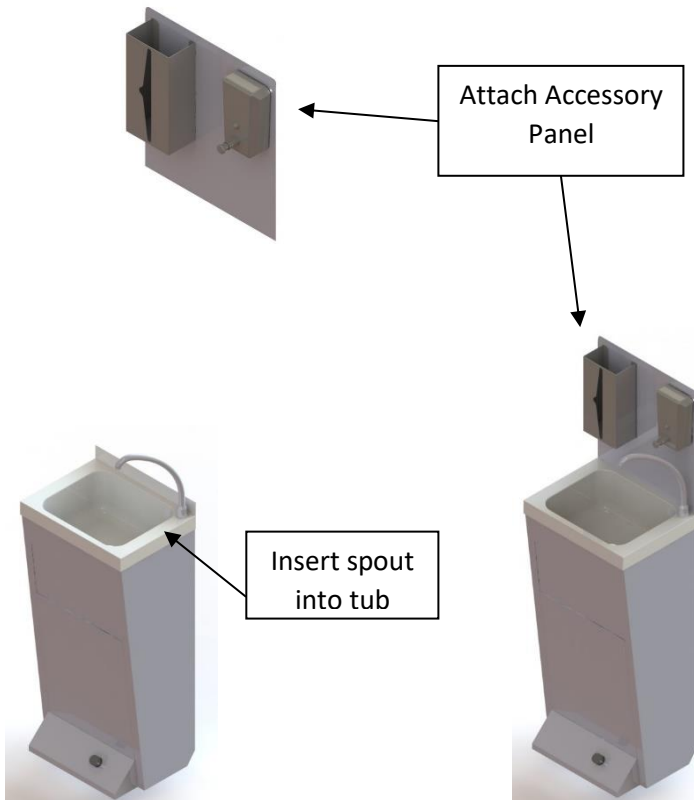

## Maintenance and cleaning:

- The product contains no electrical parts, the appliance can be immersed in water for a more efficient cleaning.
- When cleaning the appliance, do not use abrasive products which can damage it. is recommended to use a cleaning product suitable for stainless steel.

## Warranty

- The equipment is guaranteed for a period of 12 months from the date of purchase.
- The guarantee is valid against defects of origin, whether of material or of manufacture.
- Whenever there is an anomaly in the equipment, it must be returned as soon as possible, with the purchase document.
- When the warranty is triggered, damaged parts will be repaired or replaced, as the manufacturer understands. In the event of their replacement, the damaged parts become the supplier's property.
- Any defects resulting from improper installation or use / handling of the equipment are excluded from the warranty.
- The equipment will lose its warranty whenever any change or modification or even repair made by the user is identified.

**PNH PROFESSIONAL FURNITURE & INNOVATION  
RUA DO ALTO - VALE DO GROU – APARTADO 86  
3750 - 064 AGUADA DE CIMA**

**TEL. +351 234 690 190    FAX. +351 234 624 044**

**[comercial@bypnh.pt](mailto:comercial@bypnh.pt)    [www.bypnh.pt](http://www.bypnh.pt)**